



Accessories

English

Congratulations on the purchase of your WMF Coffee station.



Follow the User Manual

- > Read the User Manual carefully prior to use.
- > Please refer to the User Manual, paying special attention to the safety instructions and Safety chapter.
- > Follow the warning instructions on the coffee machine and the device.
- > Ensure that the staff and all users have access to the User Manual.



Follow the User Manual signs and symbols ▷ page 31 Follow the Safety chapter ▷ starting on page 24

Hazard to life due to electrical shock

- The voltage inside the device and the coffee machine is a hazard to life.
- > Never open the housing.
- > Never loosen the screws, and do not remove any housing parts.



Conditions for use and installation

- In the event of failure to comply with maintenance information and the specifications in the Technical Data chapter, no liability is accepted for any resultant damage.
- > Follow the User Manual.
- > Maintenance and repair work may be performed only by the WMF Service-Center, using original spare parts.

▲ WARNING

Follow the Safety chapter ⊳starting on page 24

IMPORTANT

Technical data ▷ starting on page 39 Maintenance ▷ User Manual coffee machine

Table of Contents

MF

1	Safety	24	
1.1 1.2 1.3	General safety instructions Intended use Conditions for use and installation	24 27 28	
2	Introduction and general information	30	
2.1 2.2 2.3	Parts of the coffee station General functional description Versions	30 32 32	
3	Coffee station with integrated equipment (optional)	33	
3.1 3.2 3.3	Starting operation Empty message With water filter (optional)	33 34 34	
4	Care	35	
4.1	Cleaning	35	
5	Service and addresses	36	
6	Safety and warranty	36	
6.1 6.2 6.3	Hazards to the coffee machine Duties of the owner / operator Warranty claims	36 37 38	
Appendix: Technical data			
Coffee station Water Tank System			

1 Safety

Misuse

- Failure to follow the safety instructions can result in death or serious injury.
- > Follow all the safety instructions.

1.1 General safety instructions


Hazards to the operator

At WMF, safety is one of the most essential product features. The effectiveness of the safety devices can only be ensured if the following points are observed:

- > Do not touch hot device components.
- > Do not use the device if it is
 - not working properly or if it is damaged.
 - > Use the device only when it is completely assembled.
 - > Read the User Manual carefully prior to use.
 - > Built-in safety devices must never be altered.

Intended use ⊳starting on page 26

▲ CAUTION

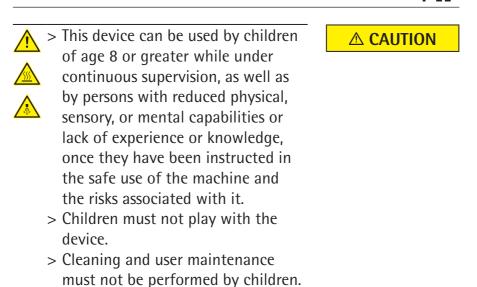

Despite the safety devices, every coffee machine poses hazard potential if incorrectly used. Please observe the following instructions when using the device so as to prevent injury and health hazards:



Hazard to life due to electrical shock

- The voltage inside the device is a hazard to life.
- > Never open the housing.
- > Never loosen the screws, and do not remove any housing parts.
- > Never use a damaged mains cable.
- > Avoid damage to the mains cable. Do not kink or crush it.
- Never immerse the mains plug in water or other liquids, or pour water or other liquids over the mains plug.
 Always keeps the mains plug dry.

1.2 Intended use



Misuse

- If the device is used other than as intended, this could lead to a risk of injury.
- > The coffee station may be used only as intended.

This coffee station is designed to operate a compatible WMF coffee machine without requiring a water infeed or drain. **The station can be set up anywhere within a room, but must not be pushed across steps, door thresholds, or other obstacles.**

The use of the device is subject to this User Manual. Any other use or use that goes beyond the aforementioned is considered incorrect use. The manufacturer shall not be liable for any damage resulting from this.



Tipping hazard

- The coffee station can tip over if transported without due care.
- > Never push the coffee station across thresholds or around curves when it is loaded with a coffee machine and optional add-on equipment.
- > The coffee machine and add-on equipment must be removed from the coffee station before transport.

▲ CAUTION

1.3 Conditions for use and installation



Risk of fire and accidents

- > The conditions for use and installation must be met.
- > The conditions for use and installation listed in the "Technical Data" chapter must be met.

 
A WARNING

Technical data ⊳page 39

Any necessary on-site preparatory work for electricity at the customer's premises is to be arranged by the machine owner / operator. The work must be carried out by authorised installation technicians in compliance with general, countryspecific and local regulations. The WMF Service engineers may only connect the coffee machine to existing prepared connection points. WMF Service is neither authorized nor responsible for carrying out any on-site installation work prior to connection. The potential equalization terminal is installed by WMF Service if needed.

▲ CAUTION





- Follow the user manual for the corresponding coffee machine.
- Observe the user manuals safety chapter.





Tipping hazard

- The coffee station can tip over if transported without due care.
- > Never push the coffee station across thresholds or around curves when it is loaded with a coffee machine and optional add-on equipment.
- > The coffee machine and add-on equipment must be removed from the coffee station before transport.

User Manual WMF Coffee Station

2 Introduction and general information

2.1 Parts of the coffee station





- 1 Table top
- 2 Door
- 3 Steering casters (2 lockable)

Integrated equipment (optional)

- 4 Waste water tank
- 5 Fill level switch (sensor for fresh water tank)
- 6 Power module (optional)
- 7 Fresh water tank



User Manual Signs and Symbols

Personal injury safety instructions

If the safety instructions are not followed, this could lead to mild to severe injury in case of improper use.

Personal injury safety instructions

If the safety instructions are not followed, this could lead to mild injury in case of improper use.



Follow the Safety chapter ▷ starting on page 24

▲ CAUTION

Follow the Safety chapter ▷ starting on page 24





Tipping hazard



Bruising or crushing hazard



Hot surfaces



Slipping hazard

Notice of property damage

- hazard to the device
- for the installation location
- > Always follow the User Manual.

IMPORTANT

Follow the Warranty chapter ▷ starting on page 38 Technical data ▷ starting on page 39

Note / tip

Instructions for safe use and tips for easier operation.

INSTRUCTIONS



2.2 General functional description

The coffee station can be equipped with a suitable WMF coffee machine and matching cooler, or with a narrow cup rack. The coffee machine sits in the middle of the cart. If there is no cooler, then the cup rack can be placed on either the left or right side of the coffee machine.

2.3 Versions

The coffee station is available in different versions.

- with shelf, no equipment
- with shelf, with grounds container, no equipment
- with equipment, no shelf
- with equipment, with grounds container, no shelf





3 Coffee station with integrated equipment (optional)



Risk of injury

- > Always secure the coffee station by locking the swivel rollers.
- The coffee station can roll away if unsecured, causing injury or damage.
 - > Always secure the coffee station and lock the swivel rollers.

3.1 Starting operation

- * Open the door of the coffee station
- st Remove fresh water tank and waste water tank
- * Unscrew the lid on the fresh water tank
- * Fill the fresh water tank with clean, cold water
- * Replace the lid on the fresh water tank
- * Check that the waste water tank is empty
- * Screw the lid, with hose, on to the waste water tank
- * Replace both tanks in the coffee station
- st Close the door of the coffee station
- * Plug the connector into a grounded outlet
- * Switch on the coffee machine, as described in the user manual

△ CAUTION

Follow the Safety chapter ▷ starting on page 24

IMPORTANT

Follow the Warranty chapter ▷ starting on page 38

3.2 Empty message



Scalding hazard

- The waste water tank does not have a fill level message or overflow safety.
- > Empty the waste water tank every time the fresh water tank is filled.
- > If the fresh water tank is removed, coffee dispensing is automatically locked out.
- > Remove the waste water tank only if the fresh water tank has already been removed.

When the fresh water tank is empty, a message appears.

For example

WMF 1100 S Display: Check external water tank

After the fresh water tank is filled, the message disappears, and the coffee machine is once again ready to use.

- * Unscrew the lid with the hose from the waste water tank, and clip it to the bracket on the right inside the coffee station
- * Remove and empty the waste water tank
- * Replace the lid on the waste water tank

3.3 With water filter (optional)



An angle is mounted on the bottom of the table top for ease in changing the filter. The filter head is hung on the angle to secure it during the change.

Optionally, the coffee station can be run with a WMF water filter.

▲ CAUTION

Follow the Safety chapter ▷ starting on page 24

INSTRUCTIONS

Change water filter ▷Water filter instructions

4 Care

4.1 Cleaning

Daily cleaning of the coffee station is done after close of business.

- $\boldsymbol{\ast}$ Perform the coffee machine cleaning program
- * Switch off the coffee machine
- st Unplug the mains plug from the outlet
- * Open the door
- st Remove fresh water tank and waste water tank
- * Unscrew the lids from both tanks
- * Completely empty both tanks
- * Remove any soiling and lime deposits with a brush
- * Rinse out the tanks thoroughly with hot water
- * Leave the tanks open to dry
- * Clean the coffee station using a damp cloth
- st Wipe dry using a fine woolen cloth
 - There is a risk of causing scratches or scoring.
 - > Do not clean with scouring powders or the like.
 - > Do not use any strong cleaning agent.
 - > Use soft cloths for cleaning.
 - > We recommend a damp microfiber cloth.

IMPORTANT

Follow the Warranty chapter ▷ starting on page 38

5 Service and addresses

You can reach WMF Service if the local service point is not known.

WMF Group GmbH Coffee Machines Export Department Eberhardstraße 35 D-73312 Geislingen (Steige)

6 Safety and warranty

6.1 Hazards to the coffee machine



Follow the manual

We do not accept any warranty for damage resulting from failure to follow this requirement.

Follow the conditions for use and installation.

Installation location

 
• The installation location must be dry and protected against water spray.

Please observe the following instructions so as to prevent problems with and damage to the device:

- For insurance reasons always ensure that, at the end of operation the mains switch is switched off or the mains plug is unplugged.
- We recommend damage prevention measures:
 - e.g. installation of smoke alarms.
- After shut off for several days we recommend thorough cleaning.

IMPORTANT

Follow the Warranty chapter ▷ starting on page 38 Conditions for use and installation ▷ starting on page 28



Duties of the owner / operator 6.2

The operator of such equipment must ensure regular maintenance by WMF Service technicians, their agents or other authorised persons, and checking of safety devices.

Access to the service area is permitted only for persons with knowledge and practical experience with the device, especially regarding safety and hygiene. The coffee machine must be set up by the operator such that care and maintenance can be performed without hindrance.

In office / floor supply or similar self-service operations, only staff instructed in operation of the coffee machine should supervise the coffee machine. Trained personnel should carry out care procedures and be available for questions regarding use.

The operator shall ensure that electrical equipment and operating facilities are in a fit state (e.g., to DGUV Regulation 3) [German Accident Prevention Association or equivalent]. In order to ensure the operating safety of your coffee machine, it is essential to perform regular checks of the safety valves and the pressure containers, among other checks.

These measures are conducted by WMF Service or by WMF authorised service personnel as part of the maintenance work

6.3 Warranty claims



Follow the manual

- We do not accept any warranty for damage resulting from failure to follow this requirement.
- > Follow the conditions for use and installation.

Whether the purchaser has any rights under warranty, and the nature of any such warranty rights that the purchaser may have, is determined by the agreement made between the purchaser and the vendor. If the requirements of this User Manual are not followed, warranty claims will not be recognised.

No warranty is provided:

- On any parts subject to natural wear and tear.
- For malfunctions due to weather, chemical, electrochemical, or electrical effects, unless attributable to a fault on the part of WMF.
- For malfunctions that occur as a result of failure to follow handling instructions and regulations, intended use, maintenance, and care of the unit (e.g., user manual).
- With respect to faults which occur as the result of failure to use original WMF spare parts or incorrect assembly by the purchaser or by third parties or by faulty or negligent treatment.
- With respect to the consequences of improper modifications undertaken without the consent of WMF, or by repair or reconditioning work on the part of the purchaser or by third parties.
- With respect to faults caused by inappropriate or improper use.

IMPORTANT

Conditions for use and installation ▷ starting on page 28



Appendix: Technical data

Coffee station

Fresh water tank capacity	about 25 liters
Waste water tank capacity	about 13 liters
Dimensions:	
Width	580 mm
Depth	580 mm
Height	900 mm
Weight empty	33 kg
Load capacity (maximum)	150 kg

Water Tank System

Nominal power rating	110 W ⁽¹
Rated voltage	230 V
Type of voltage	50/60 Hz
Current draw	max. 0.2 A
Capacity	2.3 liters/min
Pressure	max. 2.76 bar
Dimensions: Width Depth Height	131 mm 193.5 mm 74.9 mm
Type of connection	Power supply plug connector
Continuous sound pressure level (Lpa)	<70 dB(A) ⁽²

We reserve the right to make technical modifications.

- ^{[1} plus nominal wattage of installed coffee machine and any add-on equipment. Data apply only if the accessory equipment is used.
- (2 The A-weighted sound pressure level Lpa (slow) and Lpa (impulses) are below 70 dB(A) at the operating personnel workplace in any operating mode.



Your nearest WMF Service:

© 2018 WMF Group GmbH

All rights reserved, in particular duplication, distribution and translation rights. No part of this manual may be reproduced in any form or processed, duplicated or distributed using electronic systems without written consent.

Design and production / typesetting and print presentation: TecDoc GmbH; Geislingen, info@tecdocgmbh.de

Original User Manual. Printed in Germany.

We reserve the right to make technical modifications.	02.03.2018
---	------------

WMF Kaffeestation